

# READ THIS FIRST

**ADAPTIVE**  
Adaptive Micro Systems LLC

## AlphaEclipse Signs Master/Master Configuration



<http://www.adaptivedisplays.com/support/eclipse>



**1** Identify each sign. You should have two Master Units labeled Serial Address 1 and 2.


First Master Unit  
Serial Address = 1  
Contains 30-foot serial I/O cable

Second Master Unit  
Serial Address = 2

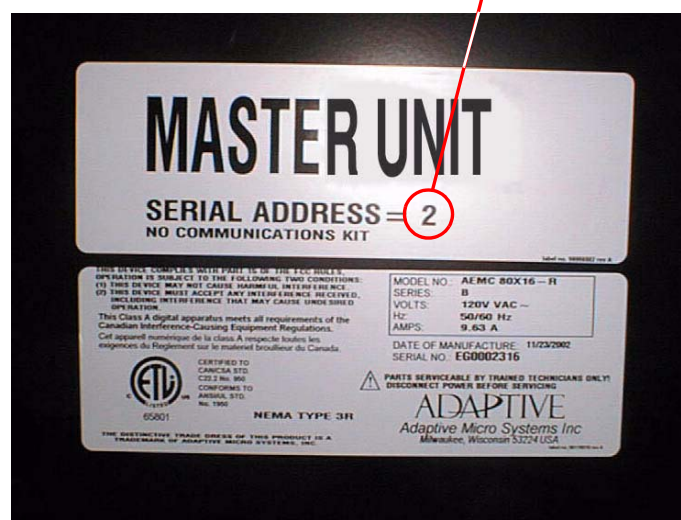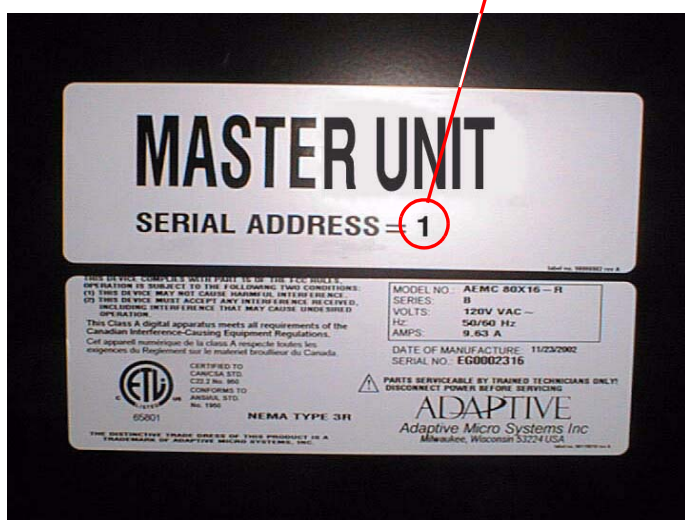

Labels are attached to the back of each sign.

**2** Open the first Master Unit labeled MASTER UNIT, SERIAL ADDRESS = 1 and locate the 30-foot serial I/O cable coiled inside.

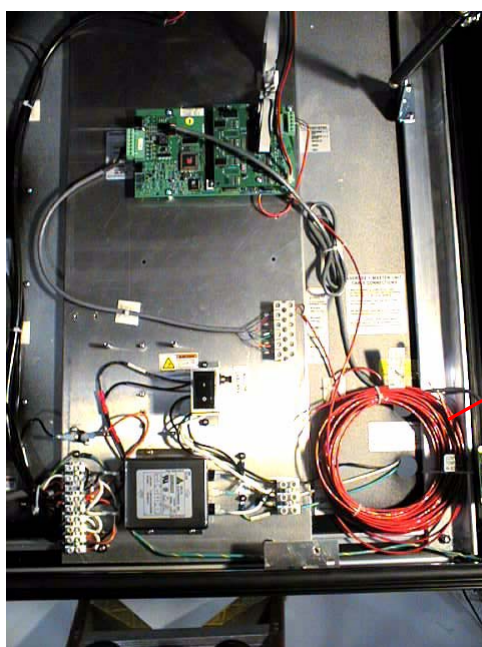


Serial I/O cable



**3** Run the serial I/O cable out of the first Master Unit through the communications conduit opening and close the sign.

First Master Unit  
Serial Address = 1

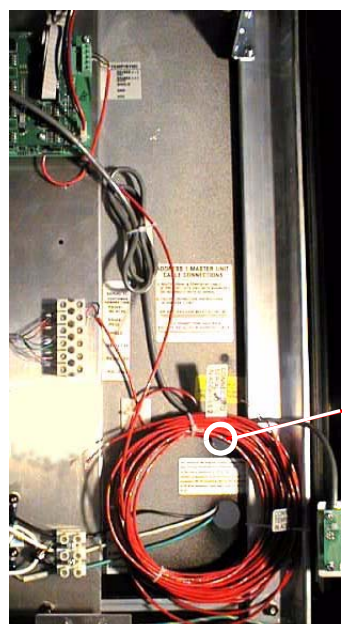


Communications conduit opening

Do not route the serial I/O cable with power wires.

**4** Open the second Master Unit labeled MASTER UNIT, SERIAL ADDRESS = 2 and run the serial I/O cable into the sign through the communications conduit opening.

Second Master Unit  
Serial Address = 2

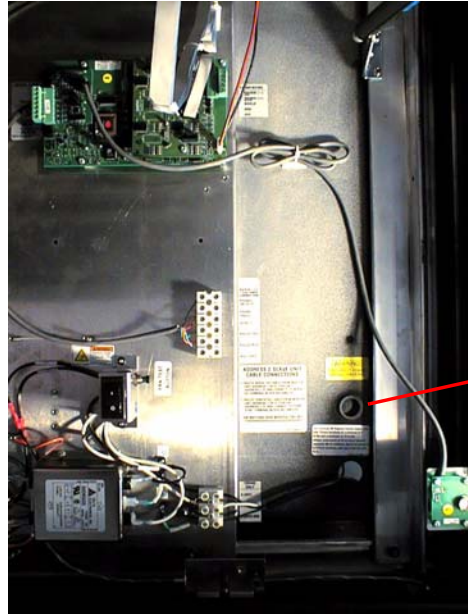


Communications conduit opening


Do not route the serial I/O cable with power wires.

**5** Connect the serial I/O cable to the second Master Unit as shown and close the sign.

AlphaEclipse 2500/2600/3500 signs

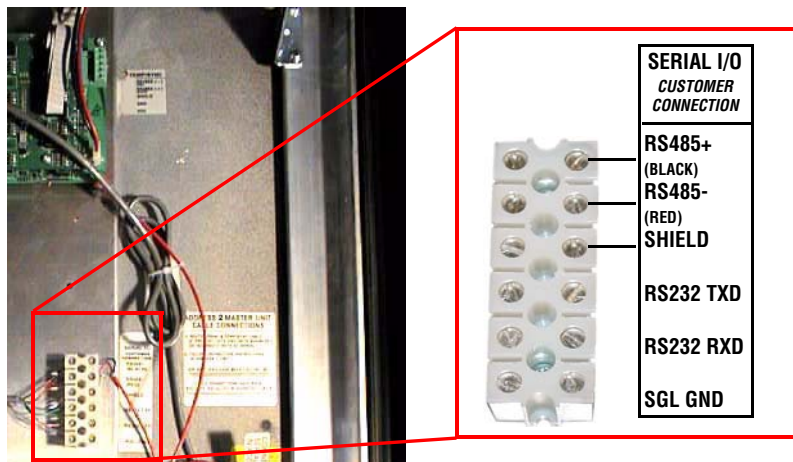

AlphaEclipse 2500/2600  
*16-row series only*

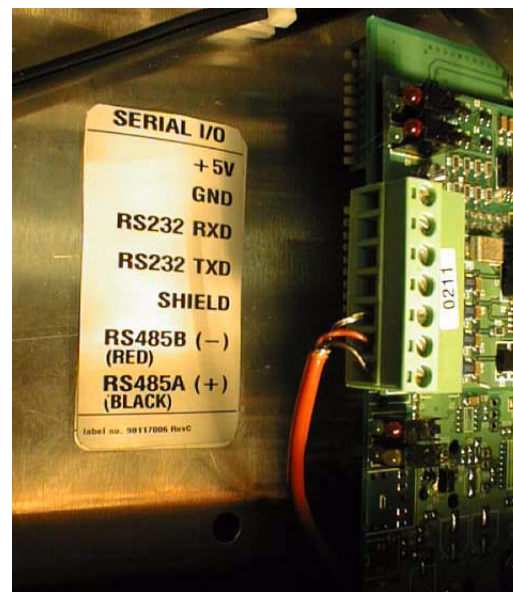

Connect to the serial I/O terminal block on the controller board.

**6** Connect the signs to the desired interface according to the AlphaEclipse Sign Installation Manual for your model (2500/2600 or 3500).