

## **ALPHA™ 4080C Installation Instructions**

## Introduction

These instructions show how to change the serial address and how to mount the ALPHA 4080C sign.

## Changing the serial address

A sign's serial address is a number from 0 to 255. The address is used to identify the sign in a network of signs. All signs leave the factory with a default address of 0.


To change the serial address on this sign follow these steps:



- 1. Point a hand-held Remote Control (shown at left) at the sign, and press PROGRAM.
- 2. Press **BACK** until SET SERIAL ADDRESS (or SET ADDRESS) is displayed.
- 3. Press **ADV** and *SERIAL ADDRESS* = 00 (or *ADDRESS* = 00) will appear.
- 4. Type in the new serial address using the numbered keys on the Remote Control. (A serial address is actually a number from 0 to 255 in *hexadecimal*. Typically, a number from 00 to 99 is used.)
- 5. Press RUN twice to set the new serial address and return the sign to normal operation.

## **Mounting instructions**

Before mounting a sign, remove power from the sign.

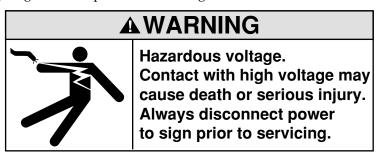

**NOTE:** ALPHA signs are for *indoor use only* and should not be continuously exposed to direct sunlight.

**NOTE:** Mounting hardware that is used to hang or suspend a sign must be able of supporting *at least 4 times* the weight of the sign.

