

# ALPHA™

## Personal Priority Display

### User Manual



**ADAPTIVE**

© 1997 Adaptive Micro Systems  
Form No. 9708-5002  
12/10/97

**NOTE:** Due to continuing product innovation, specifications in this document are subject to change without notice.

Copyright © 1996 Adaptive Micro Systems, Inc. All rights reserved.

Trademarked names appear throughout this document. Rather than list the names and entities that own the trademarks or insert a trademark symbol with each mention of the trademarked name, the publisher states that it is using the names for editorial purposes and to the benefit of the trademark owner with no intention of improperly using the trademark.

BETA-BRITE and BIG DOT are trademarks of Adaptive Micro Systems, Inc. registered in the United States Patent and Trademark Office.

ALPHA, AlphaNET, AlphaNET *plus*, AlphaNET *plus* II, ALPHAVISION, Automode, EZ KEY II, EZ95, PowerView, PrintPak, TimeNet, AlphaLert, and SMART ALEC are trademarks of Adaptive Micro Systems, Inc.

**Visit us at our Internet World Wide Web site:**

**<http://www.ams-i.com> or e-mail us at [sales@ams-i.com](mailto:sales@ams-i.com).**

# Contents

<b>Warranty</b> .....	<b>iv</b>
How to obtain warranty service .....	iv
<b>Return Merchandise Authorization (RMA) form</b> .....	<b>v</b>
<b>Description and installation</b> .....	<b>1</b>
Personal Priority Display description .....	1
Personal Priority Display technical specifications .....	2
EMI compliance.....	2
Remote Control keyboard description (optional).....	3
<b>Basic sign operation</b> .....	<b>4</b>
Turning the sign on and off .....	4
Setting the sign's time and date .....	5
Setting the sign's serial address.....	7
Clearing the sign's memory .....	8
<b>Connecting a sign to a personal computer</b> .....	<b>9</b>

# Warranty

Adaptive Micro Systems, Inc. warrants to the original purchaser that the sign, keyboard and power supply will be free of defects in workmanship and materials for a period of one year from the date of purchase.

Adaptive Micro Systems, Inc. will without charge, repair or replace, at its option, defective product or component parts upon delivery to the factory service department accompanied by proof of the date of purchase in the form of a sales receipt.

This warranty does not apply in the event of any misuse or abuse of the product, or as a result of any unauthorized repairs or alterations. This warranty does not apply if the serial number is altered, defaced or removed from the sign. Incandescent lamps used in incandescent products are not covered by this warranty.

The purchase price of this product does not include, from Adaptive Micro Systems, Inc., any on-site support, service or maintenance.

Local ordinances prohibiting the use of flashing signs may exist in some locations. Compliance with local ordinances is the sole responsibility of the customer.

To obtain warranty coverage, this product must be registered. Please complete the enclosed warranty registration card and mail it to Adaptive Micro Systems, Inc.

## *How to obtain warranty service*

1. Contact the dealer/distributor from whom the sign was purchased. If you do not know where the product was purchased, contact Adaptive Micro Systems Customer Service at 414-357-2020.
2. If the dealer/distributor cannot service the product, obtain a Return Merchandise Authorization (RMA) number through that company. An RMA number is required to obtain warranty service.
3. Fill out the Return Merchandise Authorization (RMA) Form on the following page. To obtain warranty service, this form including the RMA number must accompany the product.
4. Follow return instructions on the RMA form to return to Adaptive Micro Systems, Inc.

# Return Merchandise Authorization (RMA) form

RMA Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Company Name: \_\_\_\_\_

Contact Person: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

Phone Number: \_\_\_\_\_

Description of Problem: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## Return Instructions:

- Step 1: Obtain an RMA number from your dealer/distributor.
- Step 2: Fill out this form and include proof of purchase receipt if product is under warranty.
- Step 3: Pack this form, the sign, keyboard and transformer in the original carton (or a suitable replacement). Please write the RMA number on the outside of the package. Any damage to the product during shipment is the responsibility of the freight company or the owner of the sign.
- Step 4: Ship the package, **postage/shipping prepaid** to:

Adaptive Micro Systems, Inc.  
Attn: RMA No. \_\_\_\_\_  
7840 North 86th Street  
Milwaukee, WI 53224

**PLEASE WRITE THE RMA NUMBER ON THE LABEL OF THE SHIPPING BOX - THANK YOU.**



# Description and installation

**NOTE:** The Personal Priority Display is for indoor use only, has no customer serviceable parts, and should not be continuously exposed to direct sunlight.

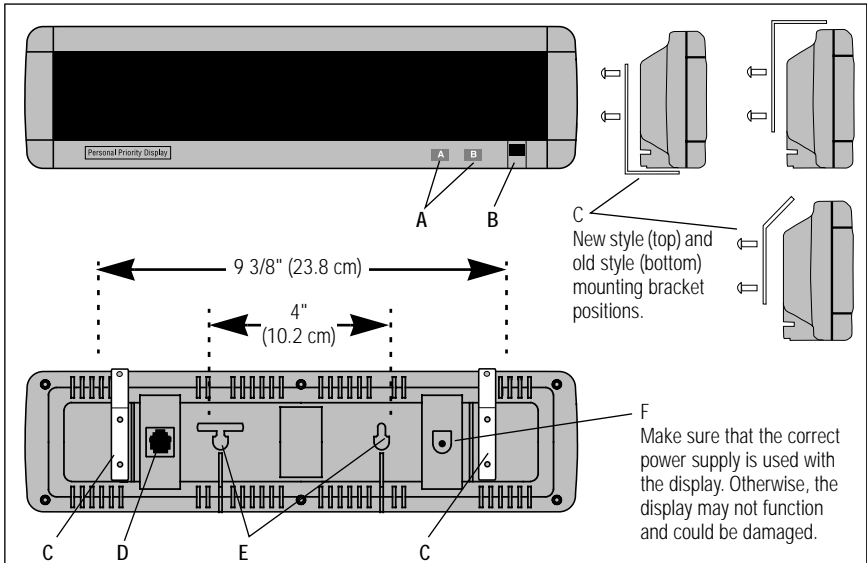 


Figure 1: Personal Priority Display (front, side, and back views).

Item	Name	Description
A	Programming buttons	Used to set the display's date, time, and serial address; to clear the display's memory; and to turn the display off and on.
B	Infrared (IR) receiver window	When the Remote Control keyboard (part number 1072-1111) is pointed at this window, the Remote Control can be used to type in messages and to program the sign's operation.
C	Mounting bracket	Used either to suspend or to hold the display upright. (The brackets and screws are included.) Make sure the mounting hardware used to hang the display can support at least 4 times the weight of the display.
D	RS232/RS485 jack	See "Connecting a sign to a personal computer" on page 9. NOTE: This jack is <u>not</u> a phone connector.
E	Wall mounting holes	Used to hang the display to screws in a wall. Use #8 screws that can support at least 4 times the weight of the display. (These screws are not supplied.) Space the screws 4" apart and at least 1/4" from the wall.
F	Power supply connection	Connects to the power supply that came with the display. NOTE: Make sure that the correct power supply is used. Otherwise, the display may not function and could be damaged.

***Personal Priority Display technical specifications***

Item	Description
Weight:	Display: 1 lb 5 oz (595.35 grams)
	Power supply: 1 lb 3 oz (538.65 grams)
Height:	3.5 in (8.89 cm)
Length:	13.7 in (34.80 cm)
Depth:	1.84 in (4.67 cm)
Input voltage:	9.0 VDC, 1.5 amp
Power supply:	120 VAC 60 Hz or 230 VAC 50 Hz
Environmental requirements:	The Personal Priority Display is for indoor use only. The display should be operated in an environment where the temperature is between 0 - 50 ° C, and the humidity (non-condensing) does not exceed 95%.

***EMI compliance***

While this device is a verified Class A device, it has been shown to meet the Class B limits.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications made to the Personal Priority Display that have not been expressly approved by Adaptive Micro Systems, Inc. could void your authority to operate the Personal Priority Display.



## Remote Control keyboard description (optional)

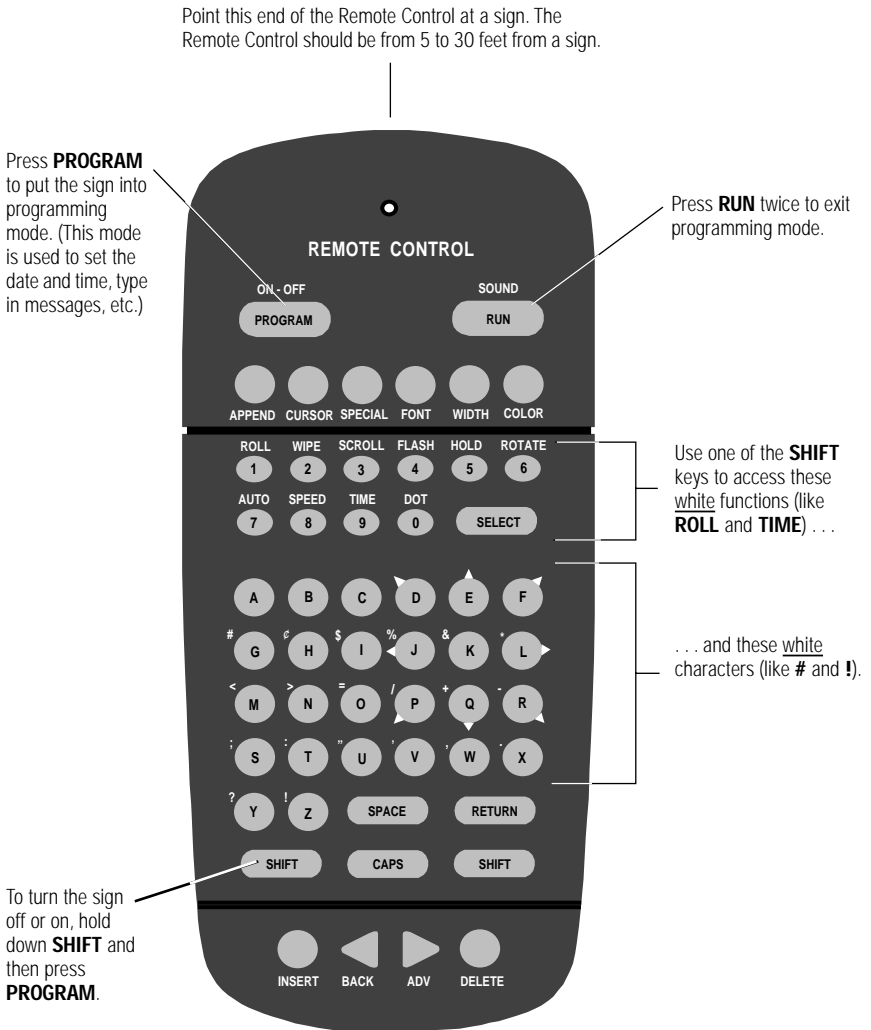 


Figure 2: Infrared (IR) Remote Control keyboard.


# Basic sign operation


 

## Turning the sign on and off

When you plug in the sign's power supply, the sign starts up automatically, and unplugging the power supply turns the sign off.

However, instead of unplugging a sign, there are two others ways to turn a sign off:

*Holding down **SHIFT** and then pressing **PROGRAM** on a Remote Control turns a sign off and on.*


*Using the **A** and **B** keys also turns a sign off and on* 

When you do this...	You see this...
Press <b>A</b> and <b>B</b> at the same time	
Press <b>B</b> 5 times.	
Press <b>A</b> to turn the sign off.	
To turn the sign back on, press <b>B</b> .	

 
 
 

 
**NOTE:** Messages that you have programmed into the sign will *not* be lost when you turn a sign off. Messages will be retained for up to 10 days if the sign is not powered.

## Setting the sign's time and date

You can set the date and time by using either the Remote Control or the **A** and **B** keys:

Using the **A** and **B** keys to set the time and date 

When you do this...	You see this...
Press <b>A</b> and <b>B</b> at the same time	
Press <b>B</b> .	
Press <b>A</b> .	
The <i>day</i> will be in wide type. Press <b>B</b> to change the day (or <b>A</b> to select the hour).	
The <i>hour</i> will be in wide type. Press <b>B</b> to change the hour (or <b>A</b> to select the minute).	
The <i>minute</i> will be in wide type. Press <b>B</b> to change the hour (or <b>A</b> to select 12 or 24-hour mode).	
<i>AM/PM</i> or <i>24 Hr</i> will be in wide type. Press <b>B</b> to change from 12 to 24-hour mode.	
Press <b>A</b> for <i>Next</i> .	
Press <b>B</b> .	

<p>Press <b>A</b> .</p>	
<p>The <i>month</i> will be in wide type. Press <b>B</b> to change the month (or <b>A</b> to select the day).</p>	
<p>The <i>day</i> will be in wide type. Press <b>B</b> to change the day (or <b>A</b> to select the year).</p>	
<p>Press <b>A</b> for <i>Next</i>.</p>	
<p><b>A</b> and <b>B</b> at the same time</p>	
<p>Press <b>A</b> to resume normal sign operation.</p>	

 

 
 
 
 
 
## Setting the sign's serial address

The serial address is a number from 0 to 99 assigned to a sign. This number permits you to send messages to an individual sign in a network of signs. Ordinarily, messages are broadcast to all signs on a network, but when you give a sign a unique address, messages can be directed to specific signs.

See the document **Network Configurations** (part number 9708-8046) for more detailed information.

You can set the serial address by using either the Remote Control or the **A** and **B** keys:


Using the **A** and **B** keys to set a serial address 





When you do this...	You see this...
Press <b>A</b> and <b>B</b> at the same time	
Press <b>B</b> until SET SERIAL (A) appears.	
Press <b>A</b> .	
Press <b>B</b> to change the first digit (or <b>A</b> to select the second digit).	
Press <b>B</b> to change the second digit.	
Press <b>A</b> for Next.	
Press <b>A</b> and <b>B</b> at the same time	
Press <b>A</b> to resume normal sign operation.	

### Clearing the sign's memory

You can clear the sign's memory by using either the Remote Control or the **A** and **B** keys:

**NOTE:** Clearing the sign's memory erases all the messages that have been programmed into the sign.

 
Using the **A** and **B** keys to clear the sign's memory 

When you do this...	You see this...
<p>Press <b>A</b> and <b>B</b> at the same time</p>	
<p>Press <b>B</b> until CLEAR MEMORY (A) appears.</p>	
<p>Press <b>A</b>.</p>	 <p style="text-align: center;">then</p> 
<p>Press <b>A</b> to clear the sign's memory. The sign will return to normal operation.</p>	

# Connecting a sign to a personal computer

Messages can be sent to a sign using a Remote Control or a personal computer running the appropriate messaging software (see below).

For further connection options, see the document **Network Configurations** (part number 9708-8046).

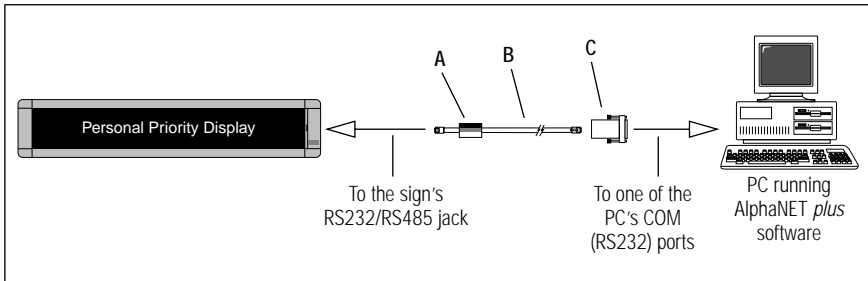

Item	Part #	Description
A	—	Ferrite (ferrite end towards sign) NOTE: A ferrite must be used in order for the Personal Priority Display to comply with Class B EMI requirements.
B	1088-8625	25-foot 6-conductor RS232 data cable
	1088-8627	50-foot 6-conductor RS232 data cable
C	4370-0001C	25 pin sub-D/to 6 pos. RJ11 adapter
	1088-9108	9 pin sub-D/to 6 pos. RJ11 adapter

