



RS485 NETWORK DROP USING MODULAR NETWORK ADAPTERS

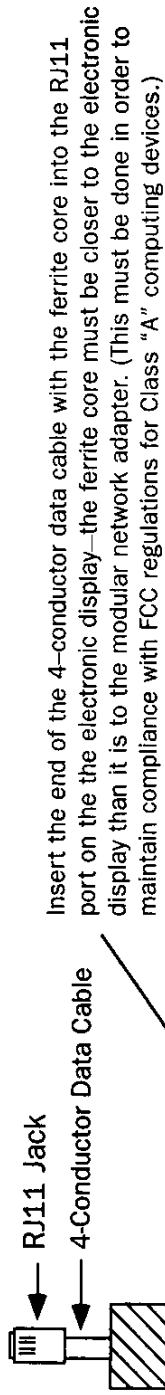

CAUTION

The RJ11 ports must not be used as direct phone connections. Damage to the displays can occur if they are connected to a live telephone circuit.

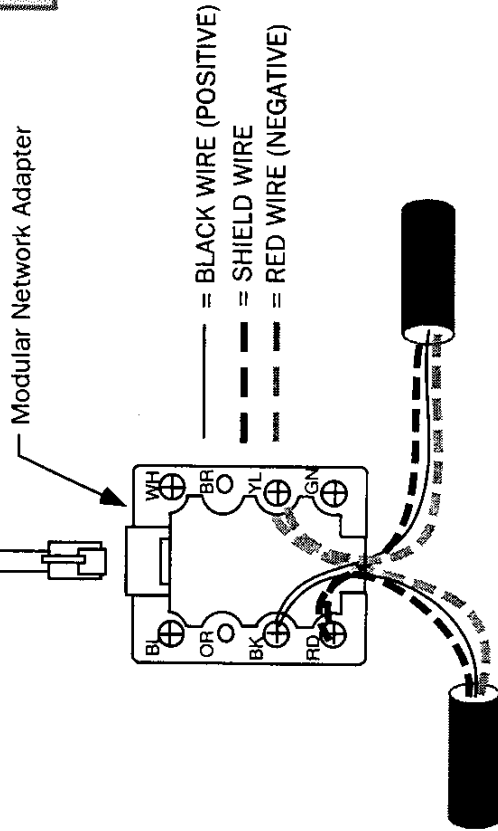

Shielded RS485 cable (P/N 1088-8000) is used to connect a modular network adapter to a converter box or to another modular network adapter.

CONNECTIONS TO NETWORK ADAPTER	
RS485 Cable:	RS485 Modular Network Adapter:
Red (-) Differential "B"	Connect to Yellow Terminal
Black (+) Differential "A"	Connect to Black Terminal
Drain Wire (Shield)	Connect to Red Terminal