

## ALPHA BLE WIRELESS ADAPTER



The Alpha BLE Wireless Adapter is a compact and inexpensive wireless receiver for Alpha and Betabrite signs.


The Alpha BLE Wireless Adapter uses Bluetooth® 4.0 LE wireless technology to communicate with a Bluetooth-equipped iPhone, iPad, iPod, or PC from a distance of over 100 feet away (line of sight).

Toss out that tedious IR keyboard. Use the Sign-Pro® iOS app and the Alpha BLE Wireless Adapter to send messages to your sign wirelessly. Transmitted messages appear instantly on the sign.

The Alpha BLE Wireless Adapter attaches to the RS232 Serial Port of most Alpha and Betabrite signs using an RS232 Sign Cable (included). The RS232 Serial Port must have a 5-volt feature, and most Alpha and Betabrite signs do. If the Alpha BLE Wireless Adapter is within range, Sign-Pro detects the adapter instantly.

The Alpha BLE Wireless Adapter Kit includes:

- Alpha BLE Wireless Adapter
- 12-inch RS232 Cable (RJ12-RJ12)
- 1.5-inch Industrial Fastener
- Detailed Online Instructions
- One-year USA factory warranty

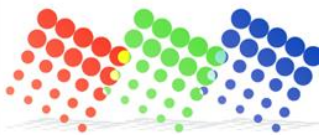

**Sign-Pro**

# ALPHA BLE WIRELESS ADAPTER

Use the 12-inch RS232 Cable (included) to connect the Alpha BLE Wireless Adapter to the RS232 Serial Port on Alpha and Betabrite signs with a powered RS232 Serial Port. Longer RS232 cables may be ordered if needed.

The Alpha BLE Wireless Adapter receives 5-volt DC power from the RS232 Serial Port of the sign it is connected to. For a list of eligible Alpha and Betabrite signs visit [sign-pro.us](http://sign-pro.us).

Use the Industrial Fastener (included) to attach the Alpha BLE Wireless Adapter to the back of your sign.

Visit [sign-pro.us](http://sign-pro.us) for information and instructions on using the Alpha BLE Wireless Adapter with the Sign-Pro app.

General Specifications	
Color	Black
Adapter Length	4.2 inches
Adapter Width	0.95 inches
Adapter Height	0.85 inches
Adapter Weight	1.2 ounces
12" Cable Weight	0.6 ounces
Shipping Weight	5.2 ounces
Shipping Dimensions	8.6" x 5" x 2.3"
Limited Warranty	One-year parts and labor, factory servicing

Features	
Compatibility	Bluetooth 4.0 LE
Max. Wireless Range	115 feet (line of sight)
RS232 Connectivity	Yes
USB Connectivity	No
RS485 Connectivity	No
Ethernet Connectivity	No
Number of Signs Connected	1 per adapter

How to Order
<ol style="list-style-type: none"><li><a href="#">Online</a> - click to order.</li><li>Call Alpha-American Signs: 858-273-3036.</li></ol>

Supported iOS Devices
<ul style="list-style-type: none"><li>iPhone (models 4S and later)</li><li>iPod Touch (5th and 6th generation)</li><li>iPad 3 with High-Density Display</li><li>iPad 4 with Retina Display</li><li>iPad Air (all models)</li><li>iPad Mini (all models)</li><li>iPad Pro (all models)</li></ul>

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks is under license. Alpha™ and Betabrite™ are registered trademarks of Adaptive Micro Systems, LLC. iPhone®, iPad®, iPod®, and iOS® are trademarks of Apple Inc., registered in the U.S. and other countries. Sign-Pro® is a registered trademark of Alpha-American Programmable Signs, Inc.

### **How does the Alpha BLE Wireless Adapter pair with an iPhone, iPad, or iPod?**

Connect the Alpha BLE Wireless Adapter to the RS232 Serial Port on your sign using the RS232 Cable (included). Plug your sign's power cord into an AC outlet. Open the Sign-Pro App on your iOS device. In Sign-Pro Settings select Bluetooth. Detect and Save the Adapter Address. Pairing is done automatically. There is no pairing code

### **Can two signs be connected to an iPhone/iPad/iPod at once?**

No. Sign-Pro connects to one Alpha BLE Wireless Adapter (and one sign) at a time. If you have two Alpha BLE Wireless Adapters, and each Adapter is connected to a different sign, both Adapters will be detected by Sign-Pro if they are within range, and both Adapters will display in Sign-Pro's list of detected devices. Select the Adapter you want to send messages to, and the sign that Adapter is connected to will display your transmitted messages.

### **Can I use the Alpha BLE Wireless Adapter and Sign-Pro to send messages to my Alpha or Betabrite sign using my Android device?**

No. Sign-Pro is an iPhone/iPad/iPod app. It does not run on Android devices.

### **Can I use the Alpha BLE Wireless Adapter and Sign-Pro to send messages to a sign made by another manufacturer?**

No. Each sign manufacturer uses unique software commands to program and control its signs. Sign-Pro is designed specifically for programming Alpha and Betabrite signs that use Alpha Sign Communications Protocol, instructions exclusive to signs manufactured by Adaptive Micro Systems.

### **Can the Alpha BLE Wireless Adapter be used with anything else?**

No. The Alpha BLE Wireless Adapter was designed specifically to be used as a wireless receiver for Alpha and Betabrite signs being programmed with Sign-Pro on an iPhone/iPad/iPod.

### **What is the power source and battery life for the Alpha BLE Wireless Adapter? Does it use alkaline batteries or rechargeable lithium ion with a charger?**

The Alpha BLE Wireless Adapter has no batteries. It is powered by the sign it is connected to.

### **Will the Alpha BLE Wireless Adapter connect to my sign's RS485 Port or Ethernet Port?**

No.

# ALPHA BLE WIRELESS ADAPTER

## **Can I buy a power accessory to use the Alpha BLE Wireless Adapter on an Alpha or Betabrite sign with a non-powered RS232 Serial Port?**

Maybe. Contact Sign-Pro for additional information.

## **Can I use a longer RS232 Cable to send messages from my office, instead of standing in front of the sign?**

Yes. Contact Sign-Pro to order a longer RS232 Cable.

## **Does the Alpha BLE Wireless Adapter have a two-year warranty option?**

Yes. The first year warranty is included in the cost. The second year warranty is \$35.

## **Does the Alpha BLE Wireless Adapter have to be manually powered on before use?**

No. There is no switch on the Alpha BLE Wireless Adapter. It must be plugged into a powered RS232 Serial Port on an Alpha or Betabrite sign. When the sign is plugged in the Alpha BLE Wireless Adapter turns on and stays on as long as the sign is plugged in, which is usually always.

## **Does the Alpha BLE Wireless Adapter communicate using Bluetooth 2.1, 3, or 4 wireless technology?**

No. It is specifically designed for use with Bluetooth 4.0 LE.

## **What if I lose the connection between my iPhone and the Alpha BLE Wireless Adapter?**

1. Reboot your iPhone/iPad/iPod.
2. Unplug your sign and plug it back in to restart the sign and the Alpha BLE Wireless Adapter.
3. Check your Sign-Pro Settings to be sure that the Alpha BLE Wireless Adapter is detected and selected.
4. Relocate your Alpha BLE Wireless Adapter. Bluetooth communications are line of sight. Walls, obstacles, and other wireless devices in the area can affect wireless communications.

## **My Alpha BLE Wireless Adapter isn't working for one of these reasons:**

- Interference from other wireless signals in my workspace
- Rules against using wireless devices in my workspace
- Logistics that prevent me from standing in front of my sign to send a message.
- My sign doesn't have a powered RS232 Serial Port.

Visit [sign-pro.us](http://sign-pro.us) for other options.